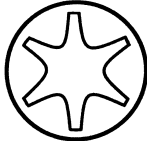
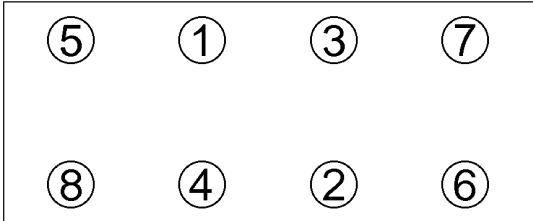


Anziehvorschrift für Zylinderkopf		297.871	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Porsche		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 966.140 M11 x 1,5 x 140				
Anziehen/ Tightening/ Serrage/ Apriete		* ☐ ➤	30 Nm 50 Nm 720° 30 Nm 110°	
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
3,0/3,6 V6 / Cyl. 1-3				
Mot. MCU.RA / MCX.ZA MCW.DA / MCW.FA 309/324 KW (420/441 PS)				
Cayenne / Panamera / Macan				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*297.871*		