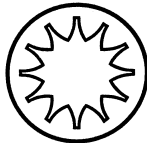
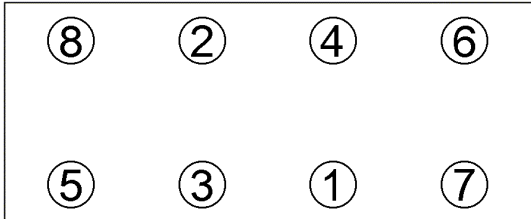


Anziehvorschrift für Zylinderkopf		326.060		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for			
Instructions de serrage pour culasse		adaptable à / adaptable a			
Prescripciones de apriete para culatas		VW / SEAT / SKODA			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
 061.330 M 9x1,25x138					
Anziehen/ Tightening/ Serrage/ Apriete		* 30 Nm ➤ 90° ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
1,0 EcoFuel					
Mot. CPGA					
50 kw (68 ps)					
VW Up!					
Seat Mii					
Skoda Citigo					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*326.060*		