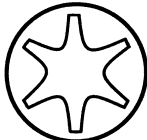
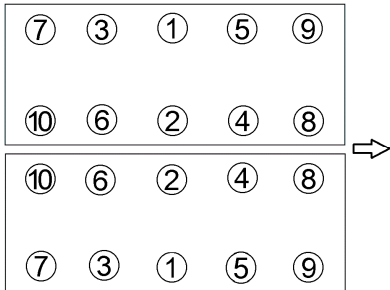


Anziehvorschrift für Zylinderkopf		354.514		
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Porsche	Das Original	
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
773.520 M11 x 1,5 x 140				
Anziehen/ Tightening/ Serrage/ Apriete	* 30 Nm 50 Nm 720° lösen 30 Nm 30 Nm 110°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot. M48.20/40/70 2009 → Cyl. 1 - 4 283,368 kW (385,500 PS) Panamera/ S / Turbo				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*354.514*	