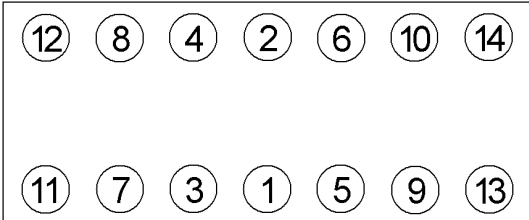


Anziehvorschrift für Zylinderkopf			376.430	 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for	
Instructions de serrage pour culasse			adaptable à / adaptable a	
Prescripciones de apriete para culatas			Mercedes-Benz	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
760.110 M 12x1,75x102				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	20 Nm 60 Nm 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ ☐ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
1.4 mm Ø 89,3 mm				
OM 648.960/961				
W211 E280CDI, E320CDI				
W220 S320CDI				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*376.430*	