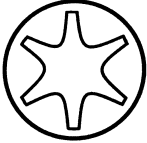
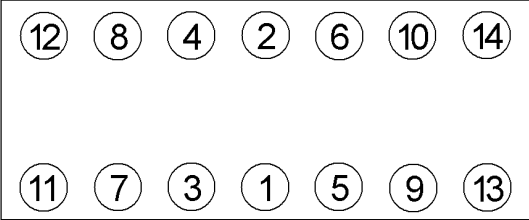


Anziehvorschrift für Zylinderkopf		383.910 passend für / suitable for adaptable à / adaptable a BMW	 Das Original			
Tightening Instructions for Cylinder Head						
Instructions de serrage pour culasse						
Prescripciones de apriete para culatas						
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
 233.380 M 12x1,5x200						
Anziehen/ * 50 Nm Tightening/ ➤ 120° Serrage/ ➤ 120° Apriete						
Zeichenerklärung / Explanations / Explication / Explicacion						
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos		
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)		
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo		
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera		
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor ✚ 1,65 mm Mot.: B57 D30 B 3,0 ltr BMW: 7´G11/G12						
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*383.910*				