



Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas	399.630 passend für / suitable for adaptable à / adaptable a Fiat/Lancia	 Das Original
--	---	--

Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo	Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
--	---

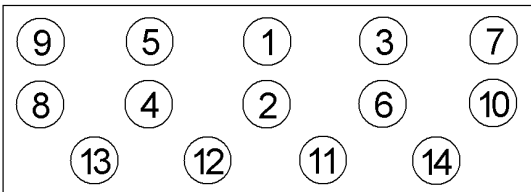

Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	Schrauben/Bolts 1 - 10 65 Nm 90° 90° 11 - 14 30 Nm	➤ ➤	Muttern/Nuts 65 Nm 40° 40°
---	---------------------	--	------------	-------------------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	desserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,90 mm, Ø 77,0 mm

Fiat Fiorino	ab 1986→1994
Fiat Duna/Elba	ab 1987→1991
Lancia Y10	ab 1988→1992

Mot. 146A5.000, 146A6.000, 146A9.000,
156B0.000