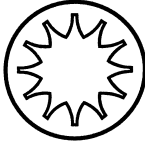
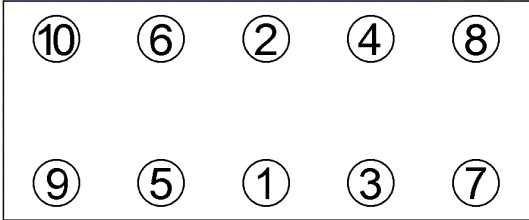


Anziehvorschrift für Zylinderkopf		425.020	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a Mercedes-Benz Das Original	
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
			
760.060 M 12x1,75x160			
Anziehen/ Tightening/ Serrage/ Apriete	M 12 * 55 Nm ➤ 90° ➤ 90°	M 8 * 25 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion			
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C) calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 98,7 mm; $\frac{1}{2}$: 1,75 mm			
Mot: M 119.960,970,972,974			
500 E (W 124), E 500 (R 129) Mot.008946← 500 SE, SEL, SEC, S 500 (C/W 140) Mot.048512← 500 SL (R 129) 500 SL, SL 500 (R 129) Mot.006679←			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*425.020*	