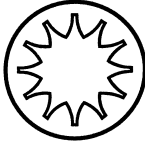
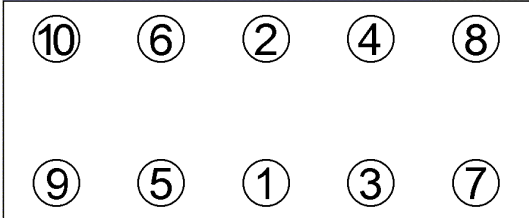


Anziehvorschrift für Zylinderkopf		425.040		 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Mercedes-Benz		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 760.060 M 12x1,75x160				
Anziehen/ Tightening/ Serrage/ Apriete	* M 12 55 Nm ➤ 90° ➤ 90°	M 8 * 25 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 98,7 mm; $\frac{1}{2}$: 1,75 mm				
Mot: M 119.960,970,972,974				
500 E (W 124), E 500 (R 129) Mot.008946← 500 SE, SEL,SEC, S 500 (C/W 140) Mot.048512← 500 SL (R 129) 500 SL, SL 500 (R 129) Mot.006679←				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*425.040*	