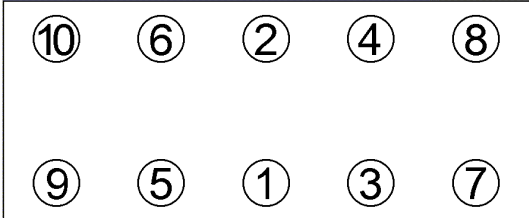


Anziehvorschrift für Zylinderkopf		425.070		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas		Mercedes-Benz			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
760.060 M 12x1,75x160					
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	M 12 55 Nm 90° 90°	M 8 * 25 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion					
* ★ ☐ ● ➤	neue Zylinderkopfschrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
93,2 mm Ø, -/1,75 mm ÷ links/left					
400 SE, SEL, S 420 (C/W 140) M.B.119.971 ab Mot.017486> 400 E, E 420 (W 124) M.B.119.976 ab Mot.010592> S 420 (C/W 140) M.B.119.981					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*425.070*		