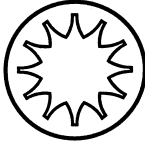
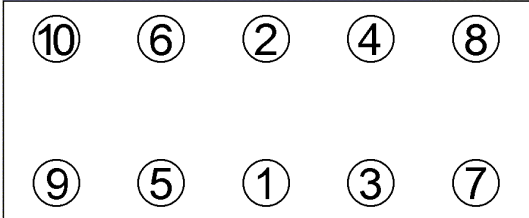


Anziehvorschrift für Zylinderkopf		425.100 passend für / suitable for adaptable à / adaptable a Mercedes-Benz	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 760.060 M 12x1,75x160			
Anziehen/ Tightening/ Serrage/ Apriete	* M 12 55 Nm ➤ 90° ➤ 90°	M 8 * 25 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 97,7 mm; $\frac{1}{2}$: 1,75 mm Mot: M 119.970,972,974,982,985 E 420, E 420 T (W 210) 500 E, E 500 (W 124) Mot.008947➔ 500 SE,SEL,SEC, S 500 (C/W 140) Mot.048513➔ 500 SL, SL 500 (R 129) Mot.010749➔			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*425.100*	