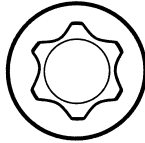
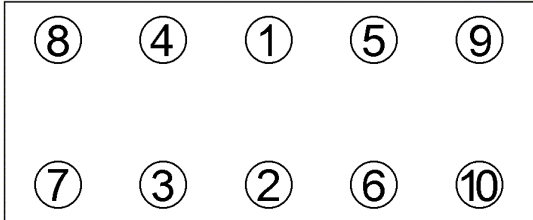


Anziehvorschrift für Zylinderkopf		431.351 passend für / suitable for adaptable à / adaptable a PSA	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
267.550 M 12x1,5x126				
Anziehen/ Tightening/ Serrage/ Apriete	Citroen: Jumper * 22 Nm 60 Nm □ 360° 60 Nm ➤ 220°			
	Peugeot: Boxer * 22 Nm 60 Nm □ 360° 60 Nm ➤ 110° ➤ 110°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø 86 mm, 1,40 4 Löcher				
Mot: 4HY, DW12UTED				
2,2 Ltr. HDi				
74 kW (101 PS)				
Boxer, Jumper ab 2002➔				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*431.351*	