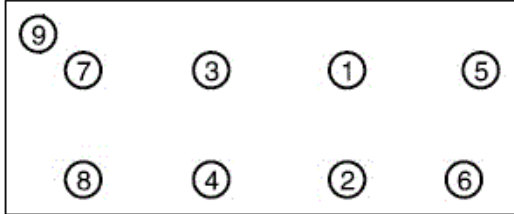


Anziehvorschrift für Zylinderkopf		448.110 passend für / suitable for adaptable à / adaptable a Chrysler/Dodge	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
Anziehen/ Tightening/ Serrage/ Apriete	* M11 1-8 / 45 lb-ft M11 1-8 / 65 lb-ft M11 1-8 / 65 lb-ft ➤ M11 1-8 / 90° M8 9 / 10 lb-ft M8 9 / 15 lb-ft M8 9 / 25 lb-ft	* M11 1-8 / 60 Nm M11 1-8 / 90 Nm M11 1-8 / 90 Nm ➤ M11 1-8 / 90° M8 9 / 12 Nm M8 9 / 20 Nm M8 9 / 35 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Chrysler Town & Country 2010-2004 3.3L V6 201cid Dodge Caravan 2007-2004 3.3L V6 201cid Dodge Grand Caravan 2010-2004 3.3L V6 201cid				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*448.110*	