



Anziehvorschrift für Zylinderkopf	451.293	 Das Original
Tightening Instructions for Cylinder Head	passend für / suitable for	
Instructions de serrage pour culasse	adaptable à / adaptable a	
Prescripciones de apriete para culatas	Porsche	

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

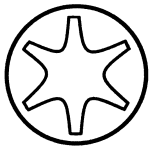

872.290
M 12x1,5x140

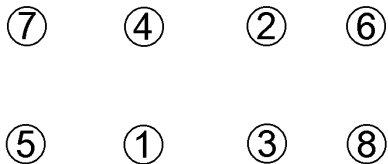

Anziehen/ Tightening/ Serrage/ Apriete	*	5 Nm	M6 = 13 Nm
		50 Nm	
		lösen / loosen	
		5 Nm	
		12 Nm	
	➤	60°	
	➤	60°	

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor 2,7l / 2,8l Boxer 6-Cyl. Ø=91,2mm ⅜=0,6mm Cyl. 5-8 MA1.20, MA1.22	*451.293*
---	------------------