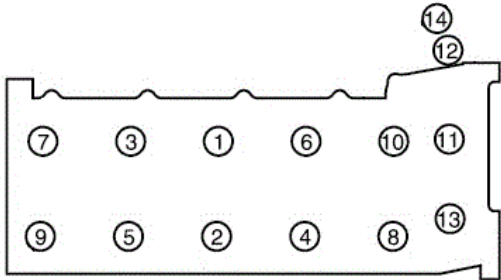


Anziehvorschrift für Zylinderkopf			454.860 passend für / suitable for adaptable à / adaptable a Dodge/Jeep	 Das Original
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤	M11 1-10 / 15 ft-lb M11 1-10 / 35 ft-lb M8 11-14 / 18 ft-lb M11 1-10 / 90° M8 11-14 / 22 ft-lb	M11 1-10 / 20 Nm M11 1-10 / 48 Nm M8 11-14 / 25 Nm M11 1-10 / 90° M8 11-14 / 30 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Dodge Dakota 2003-2000 4.7L V8 287cid Dodge Durango 2003-2000 4.7L V8 287cid Dodge Ram 1500 2003-2002 4.7L V8 287cid Jeep Grand Cherokee 2003-1999 4.7L V8 287cid				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*454.860*	