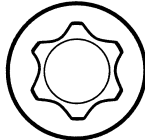


Anziehvorschrift für Zylinderkopf			456.710		
Tightening Instructions for Cylinder Head			passend für / suitable for adaptable à / adaptable a Renault		
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
			8 4 1 5 9 7 3 2 6 10		
373.281 M 11x1,5x126 E18					
Anziehen/ Tightening/ Serrage/ Apriete	* ➤	Clio, Twingo, Modus 25 Nm 25 Nm 270° ±10°	* ➤	Kangoo 25 Nm 25 Nm 225° ±10°	
Zeichenerklärung / Explanations / Explication / Explicacion					
* ★ □ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
Ø: 77,5 mm; $\frac{1}{2}$: 0,9 mm					
Mot: K9K 714, 718, 740, 766, 768, 800 1,5 ltr. dCi 47-63 kW (64-86 PS)					
Clio, Twingo, Modus, Kangoo					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*456.710*		