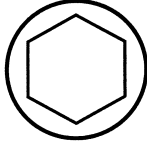


Anziehvorschrift für Zylinderkopf		460.410	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for	
Instructions de serrage pour culasse		adaptable à / adaptable a	
Prescripciones de apriete para culatas		Renault	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
	⑨ ③ ① ⑥ ⑧ ⑦ ⑤ ② ④ ⑩		
649.390 M10x1,5x123			
Anziehen/ Tightening/ Serrage/ Apriete			
* Pos. 1-10: 40 Nm ➤ Pos. 1-10: 83° ± 2° ☐ Pos. 1-10: 40 Nm ➤ Pos. 1-10: 93° ± 2° ➤ Pos. 1-10: 93° ± 2°			
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 78,5 mm; $\frac{1}{2}$: 0,7 mm			
Mot: H4J 700 - 1.4 TCe			
Renault Grand Scénic III, Scénic III Megane III			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*460.410*	