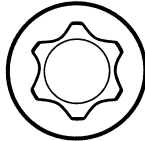
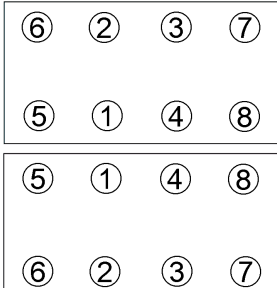


Anziehvorschrift für Zylinderkopf		475.480 passend für / suitable for adaptable à / adaptable a Mercedes-Benz	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
372.940 M12x1,75x205				
Anziehen/ Tightening/ Serrage/ Apriete	M 12 * 10 Nm 60 Nm ➤ 90° ➤ 90° ➤ 90°	M 8 20 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø 83,8 / 1,2 mm rechts/right				
Mot: OM 642.820, 822, 850, 870, 910, 930, 940, 950, 960, 990, 992, 993				
280CDI/320CDI/350CDI W211, W212, W221, W164, X164, W251, W204, W639, C219, C209, A209, 906				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*475.480*		