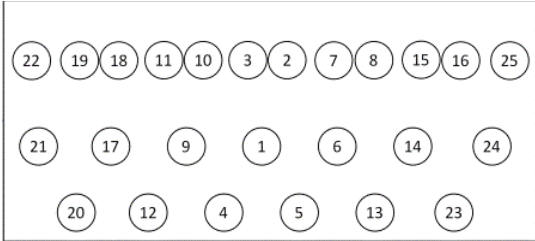


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		478.800 passend für / suitable for adaptable à / adaptable a Renault	 Das Original
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ☐ ➤	125 Nm 180° 125 Nm 180°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Mot.: dCi 4B/4C MIDR 04.02.26 A/4 MIDR 04.02.26 A/41 MIDR 04.02.26 B/4 MIDR 04.02.26 B/41 4,1 ltr. Renault			
		478.800	