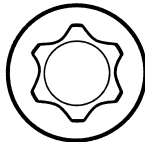
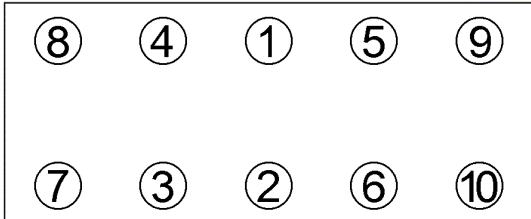


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		505.510 passend für / suitable for adaptable à / adaptable a Renault/Volvo/Mitsubishi	 Das Original
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
111.460 M 12 x 119			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ● ☐	30 Nm 100° 3 min Pos 1 - 2: 25 Nm +213° Pos 3 - 4: 25 Nm +213° Pos 5 - 6: 25 Nm +213° Pos 7 - 8: 25 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) desserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Renault 19		ab 1990→1995	
Renault Megane		ab 1996→1999	
Volvo 440 / 460		ab 1994→1996	
Volvo V40 / S40		ab 1995→1999	
Mitsubishi Carisma		ab 1996→2000	
Mot: F8Q 744/784/786, F8QT, D19T, D4192T			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*505.510*	