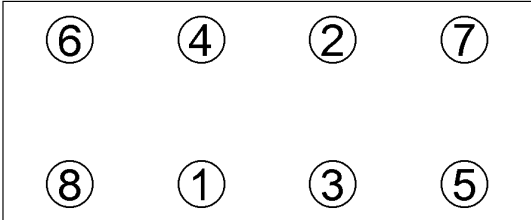


Anziehvorschrift für Zylinderkopf		505.660		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse		PSA Peugeot/Citroën			
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
642.100 M12x1,25x224,5					
Anziehen/ Tightening/ Serrage/ Apriete		* 20 Nm 40 Nm 80 Nm ➤ 180°			
Zeichenerklärung / Explanations / Explication / Explicacion					
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
Peugeot 607 ab 2004➔ Peugeot 407 ab 2005➔ Citroën C6 ab 2005➔ Citroën C5 ab 2008➔ Mot.: DT17TED4/UHZ 2,7 Ltr. HDi					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*505.660*		