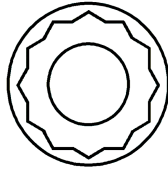
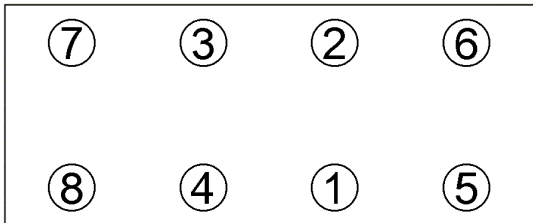


Anziehvorschrift für Zylinderkopf		539.000	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Opel	
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
			
273.150 M12x146/175			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	M12x146x1,5 40 Nm 90° 90°	M12x175x1,5 * ➤ ➤
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro			
Motortyp / Engine type / Type de moteur / Tipo de motor			
1,25 mm 3 Kerben links Mot. Z30DT 135 KW (184PS) Vectra C, Signum			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*539.000*	