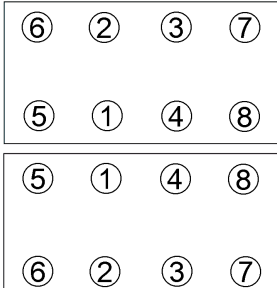


Anziehvorschrift für Zylinderkopf		548.906 passend für / suitable for adaptable à / adaptable a Mercedes-Benz	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
372.940 M 12x1,75x205				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	M12 10 Nm 60 Nm 90° 90° 90°	M8 20 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø 84,1 / 1,2 mm links/left/gauche/izquierda/sin				
Mot: OM 642.852, 858 300/350 CDI/BlueTEC				
C218, W212, S212, X218				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*548.906*	