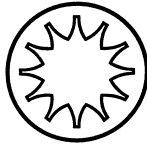
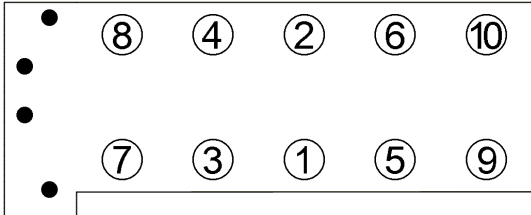


Anziehvorschrift für Zylinderkopf		553.433		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
		Mercedes-Benz		
		Das Original		
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
				
759.630 M 12 x 102				
Anziehen/ Tightening/ Serrage/ Apriete		M 102.983 > 1984 M 102.983 1984 > M 102.990		
* M 12 ➤ 70 Nm ➤ 90° ➤ 90°		* M 12 ➤ 55 Nm ➤ 90° ➤ 90°		
M 8 25 Nm		M 8 21 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
* 	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
* 	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
97,5 mm Ø				
190 E 2,3-16, M.B.102.983, 07/1984>08/1988 2,3 Ltr., 136 kW (185 PS) 190 E 2,5-16, M.B.102.990, 09/1988>				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*553.433*	