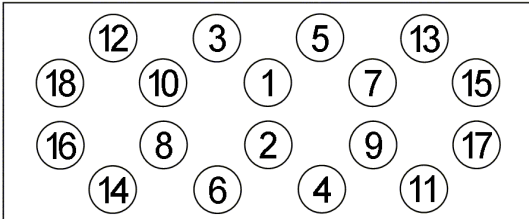


Anziehvorschrift für Zylinderkopf		565.830 passend für / suitable for adaptable à / adaptable a Land Rover	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
114.300 M 10 / M 12			

Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	40 Nm 60° 60° M12x140 mm = +20°
---	------------------	--

Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 92 mm; 1/8": 1,3 mm				
Mot: 12L; 21L 2,5 ltr. TDI				
Defender, Discovery				

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*565.830*
--	------------------