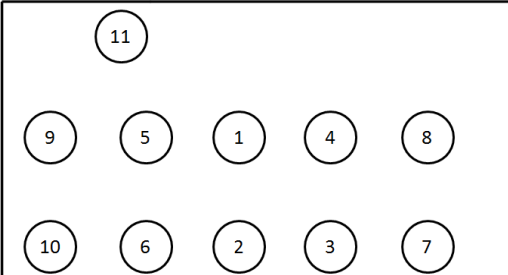


Anziehvorschrift für Zylinderkopf		592.550		 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		PSA		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 592.640 M 10x1,5x126				
Anziehen/ Tightening/ Serrage/ Apriete	* ► * ► *	Pos. 1-8: 10 Nm Pos. 1-8: 30 Nm Pos. 1-8: 230° Pos. 9-10: 10 Nm Pos. 9-10: 30 Nm Pos. 9-10: 180° Pos. 11: 10 Nm Pos. 11: 20 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ►	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 76,3 mm, $\frac{5}{8}$: 0,7 mm				
Mot: EB2, EB2F				
Peugeot 208				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*592.550*	