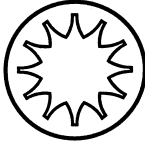
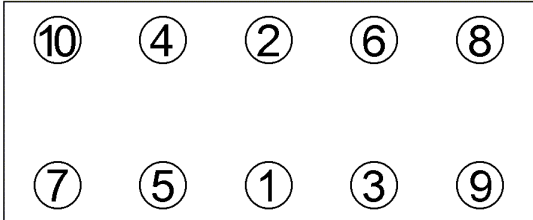


Anziehvorschrift für Zylinderkopf		593.930		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse		VW / AUDI / SEAT / SKODA			
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
351.900 M 12x1,75x206					
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	30 Nm 70 Nm 90° 90°			
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
2,0 TDI EA288 1,55 mm / 1 Loch / hole					
CVCA, CRVA, CRVC, CRLB, CRLC, CRBC, CRBD, CRFA, C					
CRUA, CSUA, CSUB, CSUE, CSUD, CKFB, CKFC, CRMB, C					
CNHA, CNHC, CUUA, CUUB, CUUC, CUUD, CUUE, CUUF, D					
DFSB, DFSC, DFSD, DFSE, DFSF, CUXA, CUWA, CUVB, C					
CUVC, CUVD, DFLA, DFLD, DFMA, DFUA, CRVA, CYKB, C					
DFEA, DFHA, DEUA, DEUB, DESA, CZHA, CZJA, DEUA, D					
DETA, DETB, DFVA, CNHA					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*593.930*		