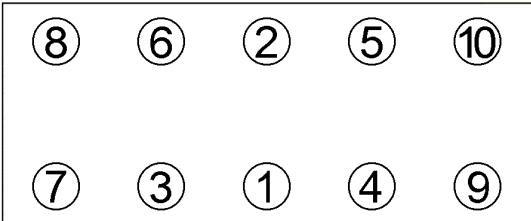


Anziehvorschrift für Zylinderkopf		626.727																										
Tightening Instructions for Cylinder Head		passend für / suitable for																										
Instructions de serrage pour culasse		adaptable à / adaptable a																										
Prescripciones de apriete para culatas		Fiat/Lancia/Alfa Romeo																										
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete																										
																												
152.080 M 10x1,25x254																												
<table><tr><td>Anziehen/ Tightening/ Serrage/ Apriete</td><td>* ➤ ➤ ➤</td><td>20 Nm 40 Nm 90° 90° 90°</td></tr></table>				Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	20 Nm 40 Nm 90° 90° 90°																						
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	20 Nm 40 Nm 90° 90° 90°																										
Zeichenerklärung / Explanations / Explication / Explicacion																												
<table><tr><td>✱</td><td>neue Zylinderkopf- schrauben verwenden</td><td>use new cylinder head bolts</td><td>utiliser des vis neuves</td><td>emplar tornillos nuevos</td></tr><tr><td>★</td><td>Warmlauf (80°C)</td><td>warm up time (80°C)</td><td>chauffage (80°C)</td><td>calentamiento (80°C)</td></tr><tr><td>□</td><td>Schrauben einzeln lösen und wieder anziehen</td><td>loosen and tighten each bolt</td><td>deserrer et serrer vis par vis</td><td>aflojar y apretar tornillo a tornillo</td></tr><tr><td>●</td><td>Setzzeit</td><td>relaxation time</td><td>durée de tassement</td><td>tiempo de espera</td></tr><tr><td>➤</td><td>Drehwinkel</td><td>torque angle</td><td>angle de serrage</td><td>ángulo de giro</td></tr></table>				✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos																								
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)																								
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo																								
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera																								
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro																								
Motortyp / Engine type / Type de moteur / Tipo de motor																												
0,49 mm $\frac{1}{16}$																												
<table><tr><td>Barchetta, N. Punto, Stilo</td><td>1,8 Ltr.</td></tr><tr><td>Mot. 188.A6.000, 192.A4.000</td><td></td></tr><tr><td>Lybra</td><td>1,8 Ltr.</td></tr><tr><td>Alfa 147, 156, 166</td><td>1,6-2,0 Ltr.</td></tr><tr><td>Mot. AR 32104, AR 37203, AR 32205, AR 36301</td><td></td></tr></table>				Barchetta, N. Punto, Stilo	1,8 Ltr.	Mot. 188.A6.000, 192.A4.000		Lybra	1,8 Ltr.	Alfa 147, 156, 166	1,6-2,0 Ltr.	Mot. AR 32104, AR 37203, AR 32205, AR 36301																
Barchetta, N. Punto, Stilo	1,8 Ltr.																											
Mot. 188.A6.000, 192.A4.000																												
Lybra	1,8 Ltr.																											
Alfa 147, 156, 166	1,6-2,0 Ltr.																											
Mot. AR 32104, AR 37203, AR 32205, AR 36301																												
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*626.727*																										