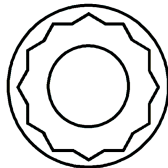
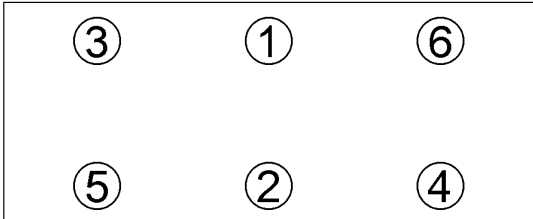


Anziehvorschrift für Zylinderkopf		650.230		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a Subaru Das Original		
				
Anziehen/ Tightening/ Serrage/ Apriete	* -> MY 2009 29 Nm 69 Nm ➤ losen 180° ➤ losen 180° 49 Nm ➤ 80° - 90° ➤ 40° - 45° ➤ only bolt 1&2: 45°	* MY 2010 -> Step 1-5: 40 Nm 95 Nm ➤ losen 180° ➤ losen 180° 10 Nm	* MY 2010 -> Step 5-10: 30 Nm 70 Nm ➤ 80° - 90° ➤ 40° - 45° ➤ only bolt 1&2: 45°	
Zeichenerklärung / Explanations / Explication / Explicacion				
* 	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★ 	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
● 	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤ 	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 101mm; $\frac{1}{8}$: 0,8mm				
Mot: EJ251; EJ253 2.5ltr. 16V Boxer				
1999➔ Baja, Exiga, Forester, Impreza, Legacy, Liberty, Outback				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*650.230*	