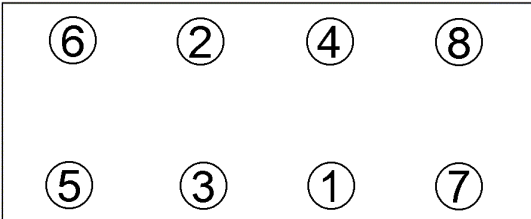


Anziehvorschrift für Zylinderkopf		650.420 passend für / suitable for adaptable à / adaptable a FORD	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
642.570 M10x105x1,5				
Anziehen/ Tightening/ Serrage/ Apriete	* 10 Nm 40 Nm □ - 45° 30 Nm ➤ 90° ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 73mm ✱: 0,70mm				
Mot:				
M1CB, M1CA, M1DA, M1JA, M1JC, M1JE, M2DA				
SFDA, M2GA, M2GB, P4JC, P4JD, P4JA, P4JB				
SFCD, SFCC, SFCA, SFCB, SFJA, SFJB, SFJD				
SFJC, XMJA, XMJB				
1.0ltr. Ecoboost / Duratec				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*650.420*	