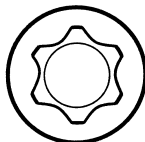
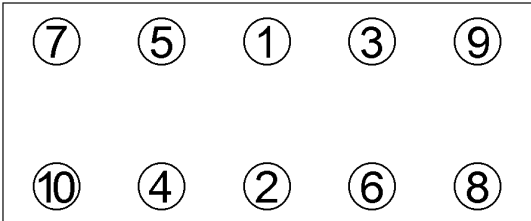


Anziehvorschrift für Zylinderkopf		658.200	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		BMW		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
233.370 M12x1,5x200				
Anziehen/ Tightening/ Serrage/ Apriete	* 70 Nm □ 180° 50 Nm ➤ 120° ➤ 120°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✳	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot. N47 D20 1995cm ³				
E81/E82/E87/E88 116d, 118d, 120d, 123d				
E90/E91/E92/E93 318d, 320d,xd				
E60/E61 520d				
E83 X3 1.8d, 2.0d				
2 Löcher, Holes, Trous, Agujeros, Fori				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*658.200*	