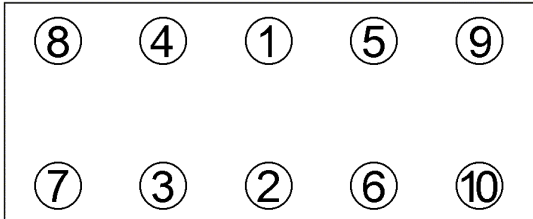


Anziehvorschrift für Zylinderkopf		688.412	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for	
Instructions de serrage pour culasse		adaptable à / adaptable a	
Prescripciones de apriete para culatas		Renault	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
373.281 M 11x1,5x126 E18			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤	20 Nm 25 Nm 270° +/-10°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 77,5 mm; $\frac{1}{2}$: 0,85 mm			
Mot: K9K, OM 607.951 1,5 ltr Diesel ab 2011➔			
Clio, Fluence, Kangoo, Laguna, Latitude, Logan Megane, Modus, Scenic, Twingo A 180, Citan			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*688.412*	