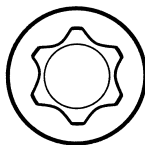


Anziehvorschrift für Zylinderkopf		688.422	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a Renault Das Original	
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
373.281 M 11x1,5x126 E18		84159 732610	
Anziehen/ Tightening/ Serrage/ Apriete	* Clio, Twingo, Modus 25 Nm 25 Nm ➤ 270° ±10°	* Kangoo 25 Nm 25 Nm ➤ 225° ±10°	
Zeichenerklärung / Explanations / Explication / Explicacion			
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C) calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 77,5 mm; $\frac{1}{2}$: 0,7 mm			
Mot: K9K 714, 718, 740, 766, 768, 800 1,5 ltr. dCi 47-63 kW (64-86 PS)			
Clio, Twingo, Modus, Kangoo			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*688.422*	