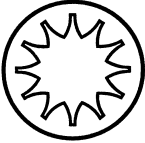
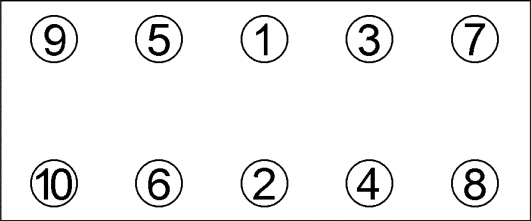


Anziehvorschrift für Zylinderkopf		721.972	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a	
		VW / Audi	
		Das Original	
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
445.910 M9x140x1,5			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	40 Nm 90° 90° 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor			
1, 4 TFSI			
Mot. CPTA, CPVA, CPWA, CMBA, CXSA, CXSB, CHPA, CNLA, CRJA,			
A1, A3, Q3, Jetta, Golf VII, Polo Oktavia, Ibiza, Leon			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*721.972*	