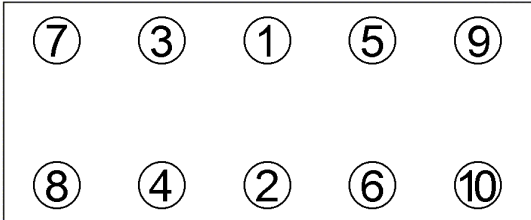


Anziehvorschrift für Zylinderkopf		722.503 passend für / suitable for adaptable à / adaptable a BMW	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
T60, T50  E12  426.890 M9 M10 M11			
Anziehen/ Tightening/ Serrage/ Apriete	* * ➤ ➤	M11/M10x173: 30 Nm M9x30/M9x70:22 Nm M11/M10: 90° M11/M10: 180°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Wärmelauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Mot. N20/N26 B20 1,0mm (+0,3) 02/16>> F20/F21 125i F22 220i,228i F30/F31/F34/F35 320i,iX, 328i,iX F32/F33 420i,iX, 428i,iX F07/F10/F11/F18 520i, 528i,iX E84 X1 16i, 20i,iX, 28i,iX F25 X3 20iX, 28iX E89 Z4 18i, 20i, 28i			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*722.503*	