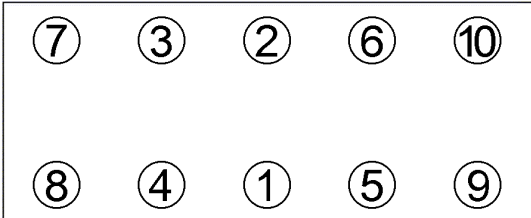


Anziehvorschrift für Zylinderkopf		732.180 passend für / suitable for adaptable à / adaptable a Peugeot	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
267.550 M12x1,5x126			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤	22 Nm 60 Nm 220°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 85,9 mm; $\frac{1}{16}$: 1,35 mm			
Mot. 4HT, DW12BTED4, Q4BA 2,2 ltr.HDI / TDCI / TD4			
C5, C6, C8, 407, 607, 807 ab 04/06➔ Galaxy, Mondeo, S-Max ab 03/08➔ Frelander ab 10/06➔			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*732.180*	