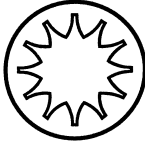
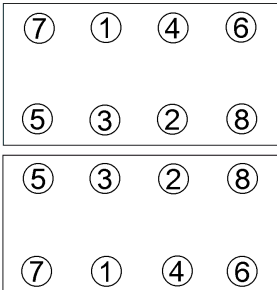


Anziehvorschrift für Zylinderkopf			735.400		 Das Original		
Tightening Instructions for Cylinder Head			passend für / suitable for adaptable à / adaptable a				
Instructions de serrage pour culasse							
Prescripciones de apriete para culatas							
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
 130.110 M 12x1,5x159							
Anziehen/ Tightening/ Serrage/ Apriete			* 35 Nm 60 Nm 90° ➤ 90°				
Zeichenerklärung / Explanations / Explication / Explicacion							
* neue Zylinderkopf-schrauben verwenden		use new cylinder head bolts		utiliser des vis neuves		emplar tornillos nuevos	
★ Warmlauf (80°C)		warm up time (80°C)		chauffage (80°C)		calentamiento (80°C)	
□ Schrauben einzeln lösen und wieder anziehen		loosen and tighten each bolt		deserrer et serrer vis par vis		aflojar y apretar tornillo a tornillo	
● Setzzeit		relaxation time		durée de tassement		tiempo de espera	
➤ Drehwinkel		torque angle		angle de serrage		ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor							
Ø 84 mm ⚙ 1,1 mm Cyl. 1-3							
Mot. CAMA, CAMB, CANA, CANB, CANC, CAND, CARA, CASA, CASB, CASC, CASD, CATA, CCLA, CCMA, CCWA, CCWB, CDYA, CDYB, CDYB, CDYC, CEXA, CGKA, CGKB							
A4, A5, A6, A8, Q5, Q7 Phaeton, Touareg							
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601				*735.400*			