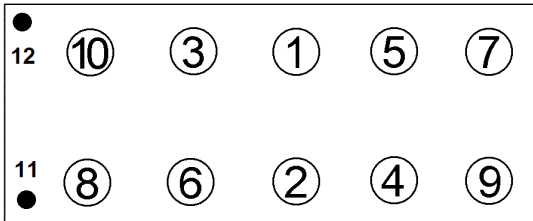


Anziehvorschrift für Zylinderkopf		746.902 passend für / suitable for adaptable à / adaptable a BMW	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 010.230 M8/M10			
Anziehen/ Tightening/ Serrage/ Apriete		Mot. N4x M8/ M10 30 Nm 90° 90° Pos. 11/12 M8x95 25 Nm	
* ➤ ➤		* * *	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Mot. N40/N42/N45/N46 B16/B18/B20 ➔01/2007			
E87 116i, 118i, 120i E46 316i/ti/Ci, 318i/ti/Ci E90/91 316i, 318i, 320i E83 X3 2.0i E85 Z4 2.0i Ø 84,5mm ± 0,4mm			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*746.902*	