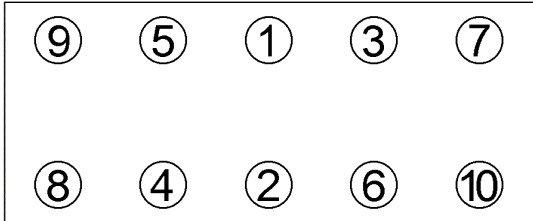


Anziehvorschrift für Zylinderkopf		758.680	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Opel / Fiat / Alfa		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	65 Nm 90° 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 84mm; $\frac{1}{2}$: 1,05 mm				
Mot: A20FD 30112012 -> 04122013				
198 A5.000, 198 A8.000, 844 A2.000				
939 B4.000, 939 B3.000, 940 A8.000,				
940 B6.000, 940 A5.000, 940 A7.000				
Combo D, Bravo, Giulietta				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*758.680*		