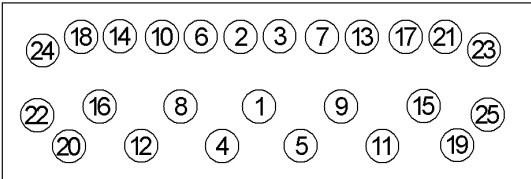


Anziehvorschrift für Zylinderkopf		760.678	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Mercedes-Benz		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A  B 				
820.075 M 12 x 111				
Anziehen/ Tightening/ Serrage/ Apriete		B OM 366, A, LA Mot. 071684 >		
* 60 Nm 90 Nm ★ 80°C 110 Nm 500 km ☐ 110 Nm		* 60 Nm 90 Nm 120 Nm ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
★	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
OM 322 M.B. 322.910>919/970/971 079240				
OM 352 M.B. 352				
M.B. 353				
OM 366				
OM 366 A				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*760.678*	