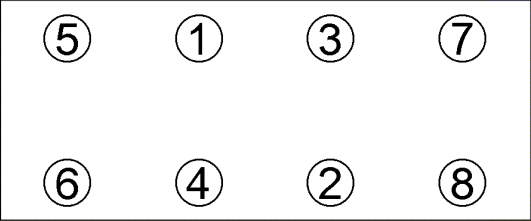


Anziehvorschrift für Zylinderkopf		761.311	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a	
		Ford	
		Das Original	
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
804.210 M 12 x 87			
Anziehen/ Tightening/ Serrage/ Apriete	* 35 - 40 Nm ● 70 - 75 Nm ● 5 min ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor			
Mot. TU 29, 6 Cyl., 2,9 l V6, 107/110 kW (145/150 PS)			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*761.311*	