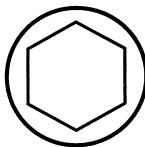
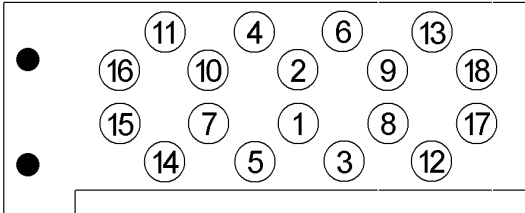


Anziehvorschrift für Zylinderkopf		764.396	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Mercedes-Benz	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
Anziehen/ Tightening/ Serrage/ Apriete	* M 10 30 Nm 60 Nm 10 min 60Nm	* M 8 25 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion			
* neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★ Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□ Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
● Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤ Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
rechts/right			
Mot. M 117.960/961/962/965/967/968			
8 Cyl.			
450 SLC 5.0, 500 SL/SLC/SE/SEL/SEC, G 500			
560 SL/SE/SEL/SEC 9/1985➔			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*764.396*	