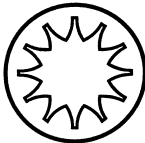
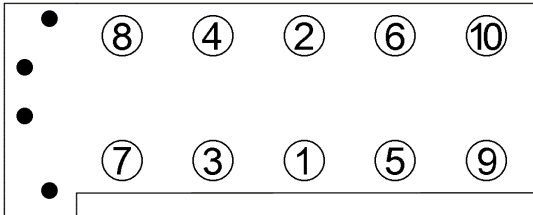


Anziehvorschrift für Zylinderkopf		764.703		 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Mercedes-Benz		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
819.956 M 12 x 119				
Anziehen/ Tightening/ Serrage/ Apriete	* M 12 55 Nm ➤ 90° ➤ 90°	* M 8 bis 1984 25 Nm	* M 8 ab 1985 21 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot. 102.910/919/920/921/922/924/938/939/961/ 962/963/965 1797 ccm / 1997 ccm 190 E 1.8, 190 E (W 201) 200 (W 123)				
6/1980>12/1985				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*764.703*	