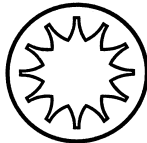
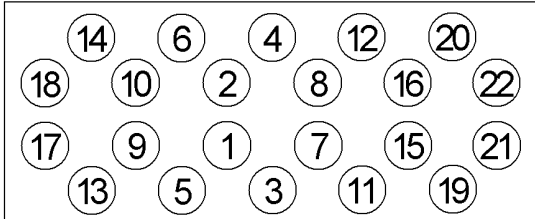


Anziehvorschrift für Zylinderkopf		776.769		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse		Mercedes-Benz			
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
820.210 M 12x104/119/144					
Anziehen/ Tightening/ Serrage/ Apriete	* M 12 A 70 Nm 90 Nm ● 10 min 100 Nm	* M 12 B 40 Nm 70 Nm ● 10 min ➤ 90° ➤ 90°	* M 8 25 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
Mot. OM 617.913 1982➔ OM 617.910 9/1974➔10/1976 OM 617.912 1/1976➔ OM 617.931/32 OM 617.950/951/952 1978➔					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*776.769*		