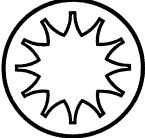
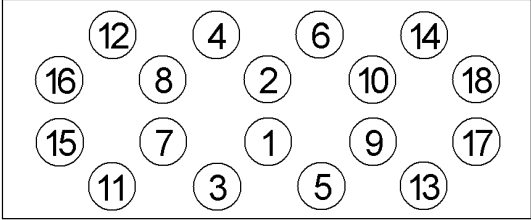


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		776.778 passend für / suitable for adaptable à / adaptable a Mercedes-Benz		 Das Original	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
820.199 M 12x104/119/144					
Anziehen/ Tightening/ Serrage/ Apriete		M 12 A * 70 Nm M 8: 25 Nm 90 Nm ● 10 min 100 Nm		M 12 B * 40 Nm M 8: 25 Nm 70 Nm ● 10 min ➤ 90° ➤ 90°	
Zeichenerklärung / Explanations / Explication / Explicacion					
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601 *776.778*					