
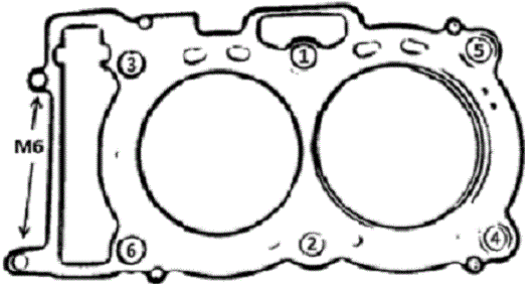


Anziehvorschrift für Zylinderkopf	784.950	 Das Original
Tightening Instructions for Cylinder Head	passend für / suitable for	
Instructions de serrage pour culasse	adaptable à / adaptable a	
Prescripciones de apriete para culatas	BMW	

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

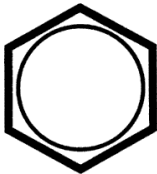

Anziehen/ Tightening/ Serrage/ Apriete

*

➤

➤

30 Nm
90°
90°

M6=10 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor Mot: W20 K06 A 0,65ltr 75KW BMW: i3, K18 C600/650 K19 C650	
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601 *784.950*	