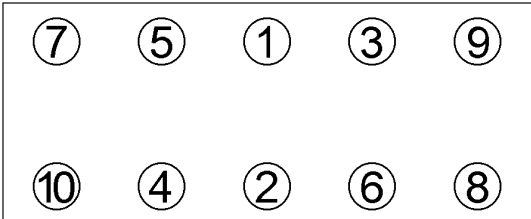


Anziehvorschrift für Zylinderkopf		789.873	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Audi		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
189.380 M 12x1,75x137				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	30 Nm 65 Nm 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
2,0 TDI 4 Zyl. 2 Loch 1,63mm				
Mot: CNEA, CSHA, CKTB, CKTC, CKUC, CKUB, CSLB, CSNA 80-132 KW (109-180 PS)				
Amarok, Crafter ab 04.11.2013				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*789.873*	