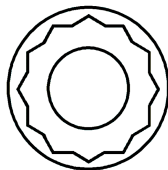


Anziehvorschrift für Zylinderkopf		800.710 passend für / suitable for adaptable à / adaptable a Toyota / Lexus	 Das Original																
Tightening Instructions for Cylinder Head																			
Instructions de serrage pour culasse																			
Prescripciones de apriete para culatas																			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete																	
		<table><tr><td>7</td><td>2</td><td>4</td><td>6</td></tr><tr><td>5</td><td>3</td><td>1</td><td>8</td></tr><tr><td>8</td><td>1</td><td>3</td><td>5</td></tr><tr><td>6</td><td>4</td><td>2</td><td>7</td></tr></table>		7	2	4	6	5	3	1	8	8	1	3	5	6	4	2	7
7	2	4	6																
5	3	1	8																
8	1	3	5																
6	4	2	7																
Anziehen/ Tightening/ Serrage/ Apriete		* 25 Nm 54 Nm ➤ 90°																	
Zeichenerklärung / Explanations / Explication / Explicacion																			
*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos															
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)															
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo															
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera															
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro															
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 88,9 mm / ⌀: 1,3 mm assembly position: right side 3.0 Ltr. V6 24V / 3.5 Ltr. V6 24V Mot.: 1MZ-FE / 2MZ-FE Avalon, Camry, Sienna, Solara, Windom Lexus ES300																			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*800.710*																	