


Anziehvorschrift für Zylinderkopf		820.407	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Audi	

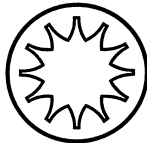

819.875
M 12 x 115

9

5

3

1

7

11

12

8

2

4

6

10

Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ * ➤ ➤ ➤	40 Nm 60 Nm 90° 90° 80°C 90° 1.000 km 90°
---	---------------------------------	--

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

1,53 mm ÷

Mot. CN, 2,0 l Diesel, 5 cyl.

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

820.407