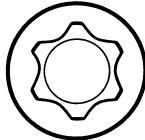
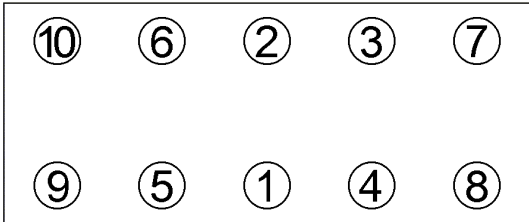


Anziehvorschrift für Zylinderkopf		825.345 passend für / suitable for adaptable à / adaptable a Opel/Vauxhall	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 820.262 M 10 x 140			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	25 Nm 60° 60° 60°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 79,3 mm; $\frac{1}{4}$: 1,8 mm Mot: 14NV, C14NZ, C14SE, X14SZ, X14NZ 1,4 Ltr. OHC Astra F, Corsa A, Corsa B, Kadett E			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*825.345*	