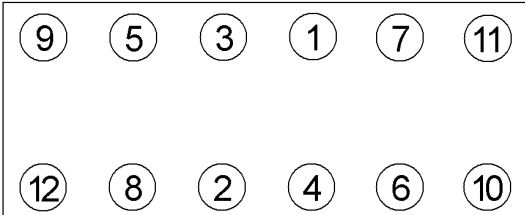


Anziehvorschrift für Zylinderkopf		826.219	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Audi		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 819.850 M 11 x 96				
Anziehen/ Tightening/ Serrage/ Apriete		* ➤ ➤	40 Nm 60 Nm 90° 90°	
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø 82,7 mm				
Mot. JS, HP, MP, JL, KP, SL, RT, PS 5 Cyl., 2,0 Ltr., 85 kW (115 PS)				
Mot. KU, KX, JT, HY, PX, MC, 1B, 2B 5 Cyl., 2,2 Ltr., 2,3 Ltr.,				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*826.219*	